

# MOUNTING INSTRUCTIONS

## In-wall mounting set integra 2.0



### General

**Description** ekey In-wall mounting set integra 2.0  
**Item No.** 101 302 (101 307 incl. LED's)

### Dimensions (WxHxD) in mm

**Flush-mounted housing:** 60,50 x 122,50 x 37  
**Front cover:** 96 x 142 x 2


### Material

**Flush-mounted housing:** Galvanized metal sheet  
**Front cover:** Brushed stainless steel


### Mounting

Before you start mounting this accessory, you need to make a recess in the masonry, at a minimum height of **155 cm** (height to the lower edge).

- a. Fix the flush-mounted housing (1) into the masonry using the 4 retaining brackets (2).
- b. Then fit the finger scanner (3) into the front cover (4).
- c. Proceed with the wiring (5) (see Wiring instructions).
- d. Place the finger scanner (3) with the front cover (4) onto the flush-mounted housing (1).
- e. Once you have found the ideal position, fix the finger scanner (3) using the left and right screws (the upper screw is not needed). Both self-locking parts turn outwards and both the finger scanner (3) and the front cover (4) are thus fixed to the flush-mounted housing (1).
- f. Finally, snap the design element (6) into place, first on the top side and then on the bottom side of the finger scanner (see fig. (7)).

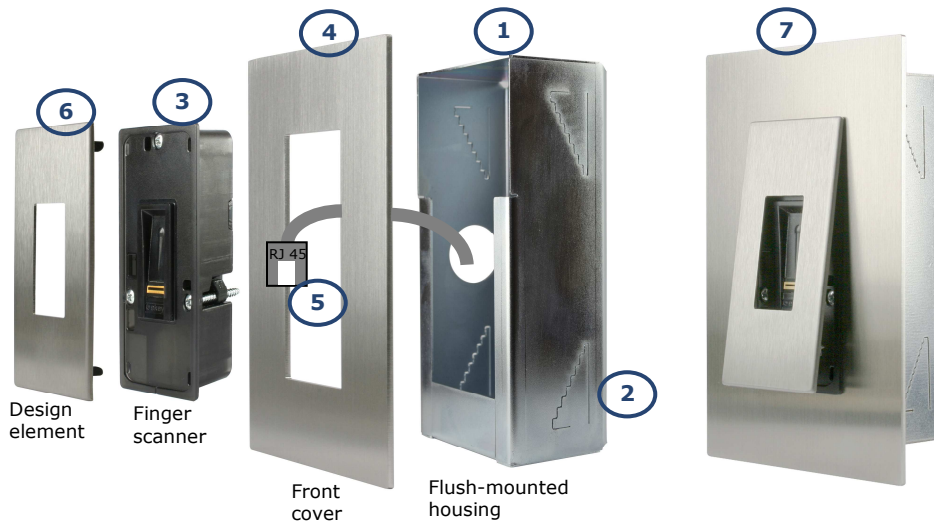

### LED connection (only for item # 101 301)

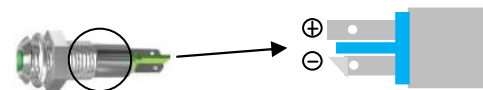

Supply voltage: 12-14 VDC  
On state current: 10-20 mA

When connecting the LEDs, be sure to pay attention to the polarity!

**BEWARE: LEDs are not convenient for AC operation!**