

ekey OM ST frame



Note about this document

This User Guide is not subject to updating. You can find the latest version of this User Guide on www.ekey.net. Subject to optical and technical modifications, any liability for misprints excluded.

Scope of supply:

Item # 101 372 ekey OM ST frame

1 pc. mounting bracket with gasket	1 pc. stainless steel frame with gasket	Mounting instructions	Screws 2pcs. M3 x 12

Intended purpose

The *ekey OM ST frame* makes it possible to install the *ekey OM finger scanner* in exposed outdoor locations and guarantees, if mounted correctly, a protection class of IP64.

Dimensions


72mm x 72mm x 6.5mm



ekey biometric systems GmbH
Lunzerstraße 89
A- 4030 Linz
www.ekey.net

Subject to optical and technical modifications, any liability for misprints excluded!
ID5: 801549: Version 1 dated 22.9.2011

Mounting

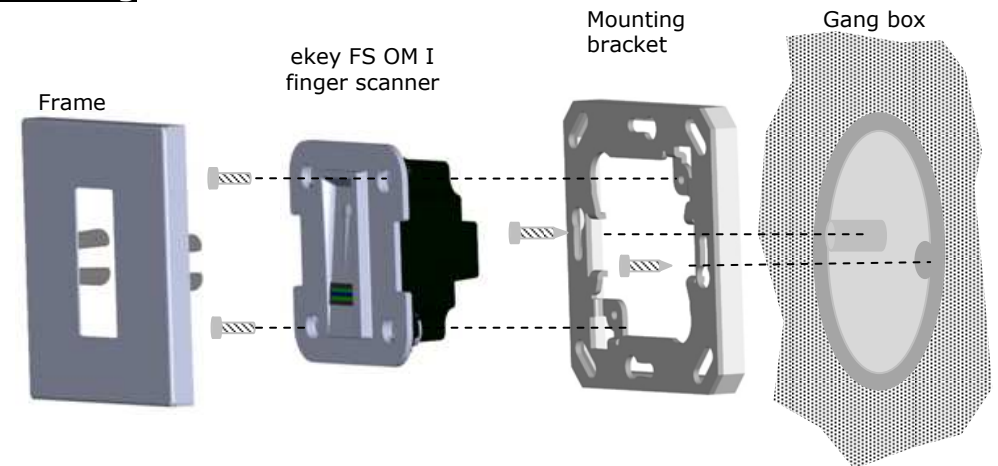

- (1) Install the *gang box* as described in the *ekey Finger scanner OM* mounting instructions.
- (2) See to it that the surface around the gang box is plastered neatly and evenly. The maximum graining may not exceed 2mm.
- (3) Mount the *mounting bracket* with 2 screws onto the gang box.
- (4) After having connected the finger scanner to the mains (only to be done by a qualified technician), mount the finger scanner onto the **mounting bracket** using the screws supplied together with the finger scanner (M3 x 12).
- (5) Finally, slide the frame onto the finger scanner until it is totally engaged and the finger scanner finger-swiping area fits exactly into the opening in the frame.

